



Transmitters and receivers are available in the following frequency range:

Frequency range	Bandwidth	Number of frequencies
806.125 - 809.750 MHz	4 MHz	max. 30

Transmitters and receivers have 8 frequency banks respectively. Each of the channels in the frequency banks has been factory-pret set to a frequency. These frequency presets within one frequency bank are intermodulation-free. They cannot be changed.

The table printed on the back side lists the frequency presets in the frequency banks **1** to **8**.

Conditions and restrictions for using frequencies

There may be special conditions and restrictions for using frequencies in your country.

Before putting the product into operation, find the information for your country at the following address:

www.sennheiser.com/frequency-information

Frequenzbereich / Frequency range

JB 806.125 – 809.750 MHz

JB 806.125 – 809.750 MHz

Channel			Bank 1	Bank 2	Bank 3	Bank 4	Bank 5	Bank 6	Bank 7	Bank 8
XS WIRELESS 2 **	XS WIRELESS 1 *	1	806.125	806.250	806.375	806.500	806.625	806.875	806.125	806.250
		2	806.625	806.750	806.875	807.000	807.125	807.375	806.750	806.875
		3	807.250	807.375	807.500	807.625	807.875	808.125	807.250	807.375
		4	807.750	807.875	808.000	808.125	808.375	808.625	808.000	808.125
		5	808.500	808.625	808.750	808.875	809.000	809.250	808.500	808.625
		6	809.000	809.125	809.250	809.375	809.500	809.750	809.125	809.250
		7	809.625	809.750	-	-	-	-	809.625	809.750
		8	-	-	-	-	-	-	-	-
		9	-	-	-	-	-	-	-	-
		0* / 10**	-	-	-	-	-	-	-	-